


Using the Keyboard Case

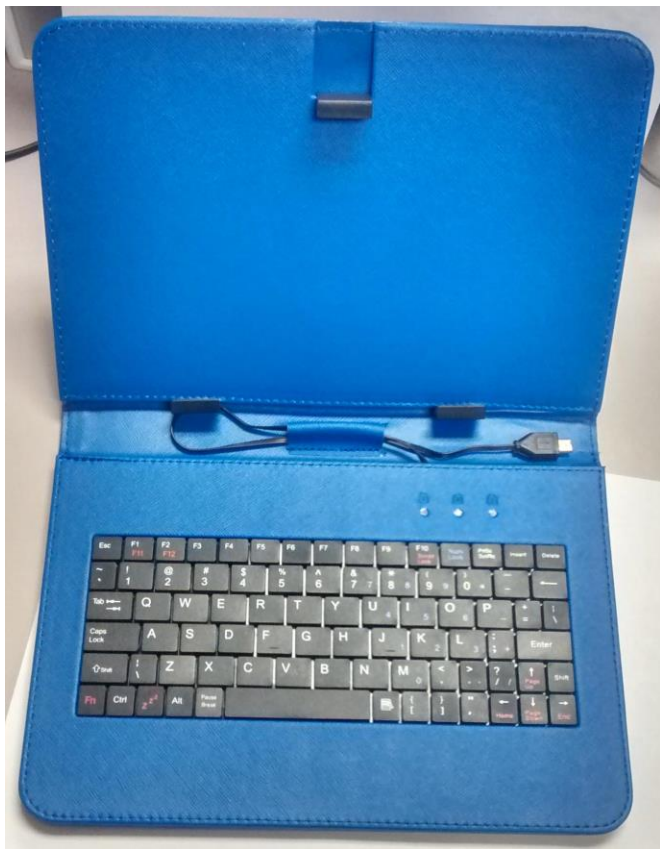

1. Place the tablet inside of the anchors on the Keyboard Case and open the kickstand on the back. There are three anchors, two for the bottom of the tablet, and one for the top.
2. Plug the USB cable on the case into the USB port of the tablet. The cable is stored in the spine flap on the case when not in use.
3. Type using the Keyboard Case keys when you would normally use the onscreen keyboard.
4. If you have any questions related to the use of your Keyboard case, please contact our technicians by phone at 580.272.0035 or by email at mssupport@machspeed.com.